

# Phrozen Sonic XL 4K 2022

## Qualified by Dreve

Compact desktop LCD printer with 52  $\mu$  printing precision thanks to 4K display and high light intensity for fast build times. High-quality processed full metal housing, large build platform, and easy vat exchange make the Dreve version of the Sonic XL 4K 2022 a user-friendly 3D printer for all dental applications.

### Features

- + Very large build volume
- + Easy exchange of components such as the vat blank
- + 52  $\mu$ m printing precision thanks to 4K display
- + High light intensity for short build times
- + Stainless steel build platform: significantly improved adhesion properties
- + Very high-quality material for long-term reproducible printing results
- + Unit calibrated by Dreve in Unna: Defined factory settings for optimum printing results



**Highly economical**  
Reasonable price



**Highly compatible**  
Optimally matched to the digital workflow



**Super simple**  
User-friendly operation and comprehensive support from the Dreve 3D printing experts



**Super fast**  
Single parts are printed in less than 2 hours



### Technical data

Technical data	H 470 x W 330 x D 290 mm
Weight	approx. 18 kg
Voltage	100–240 V / 50–60 Hz, 0.7 A
Construction volume	X 200 x Y 125 x Z 200 mm
Layer thickness	0.01–0.30 mm





# The FotoDent® product world

## You print it

Leading in detail precision in 3D printing resin production: With our FotoDent® product world you benefit from our many years of expertise with many innovations in medical 3D printing. You get a wide material variety of customized 3D printing resins for every dental need. The result: optimal 3D printed products that are more precise and last longer.



FotoDent® biobased model

Print time/part (min): 3.8

Parts/platform (hor.): 10



FotoDent® model2 white

Print time/part (min): 2.9

Parts/platform (hor.): 10



FotoDent® tray

Print time/part (min): 12.8

Parts/platform (vert.): 16



FotoDent® gingiva

Print time/part (min): 1.3


Parts/platform (hor.): 55



FotoDent® IBT

Print time/part (min): 4.8


Parts/platform (hor.): 10

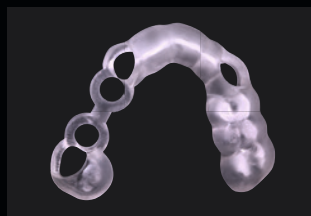

FotoDent® guide

Print time/part (min): 9.1


Parts/platform (vert.): 16

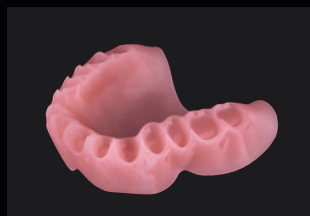

FotoDent® denture pink opaque

Print time/part (min): 8.9

Parts/platform (vert.): 15

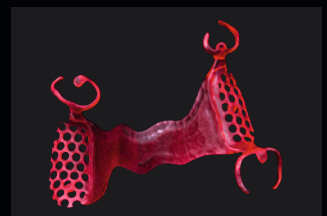

FotoDent® cast

Print time/part (min): 7.6

Parts/platform (hor.): 12

Dreve Design Rev. 101122